

Brand	Part No	Fax Printer	MM XM
Brother	PC92RF	Brother Intelli Fax 900, 950, 980, 1000P, 1500M, 1150, 1250, 1350, 1450MC, 1550MC, MFC1650, 1750, 1850MC, 1950MC & PLUS	217 X 115
Brother	PC102RF	Brother Intelli Fax 1150, 1250, 1350, 1450MC, 1550MC, MFC1650, 1750, 1850MC, 1950MC & PLUS	217 X 200
Brother	PC202RF	Brother Intelli Fax 1010, 1020, 1030, 1170, 1270, 1570, MFC 1770, 1970MC	217 X 136
Brother	PC302RF	Brother Intelli Fax 750, 770, 870MC, 970MC	217 X 77
Brother	PC402RF	Brother Intelli Fax 645/685MC, 1280/1980MC, MFC-960MC, 780	217 X 47
Muratec	PF-10A (CX/MX)	Muratec M 3500, 3600, 3700	220 X 100
Muratec/ Monroe	PF100 (PF150)PF4000MC)	Muratec F50, F60J, F70, F72, F73, M4500, M4700, M3000, Monroe MX4010, Nashua P-292, Omnifax L29	220 X 200
Panasonic	KX-FA 55A	KX-FP80, KX-FP81, KX-FP82, KX-FP85, KX-FP86, KX- FP88, KX-FP91, KX-FP95, KX-FP151, KX-FP155	220 X 50
Panasonic	KX-FA 134/ 133	KX-F 1000, 1020, 1100, 1200, 1050, 1070, 1150, 1006, 929	220 X 200
Panasonic	KX-FA 136A	KX-FP200, KX-PM210, KX-FM215, KX-FM220, 230, KX- F969, KX-F1010, 1015, 1016, 1110	220 X 100
Sharp	FO-3CR (UX-3CR)	Sharp UX300, 305, 460, FO-730, 760, 780	220 X 30
Sharp	FO-6CR (UX-5CR)	UX-P, UX-A, UX-C, NX-P, NX-A, FO-P, FO-A, Series Facsimiles	220 X 50
Sharp	FO-15CR (UX- 15CR)	Sharp FO-1450, 1650, 1850, F-1500M, FO-1460, 1660M, UX500, 510, 600M 1000, 1100, 1300, 1400	220 X 150
Sharp	FO-16CR (UX- 10CR)	Sharp FO-1450, 1650, 1850, F-1500M, UX1000, 1100, 1300, 1400	220 X 200
Toshiba	Toshiba IF-01	Toshiba Fax TF-511, 48H, Lanier 3400, Monroe DX-230, MX-3020	220 X 50
Toshiba	Toshiba IF-03	Toshiba Fax TF-511, 48H,	220 X 100
XEROX	7033		220 X 200